

# 6. APPLICATION DATA

PSC012D119

## 6.1 Installation of outdoor unit

Outdoor unit capacity  
FDC224-335

- ⦿ This installation manual deals with outdoor units and general installation specifications only. For indoor units, please refer to the respective installation manuals supplied with your units.
- ⦿ Please read this manual carefully before you set to installation work and carry it out according to the instructions contained in this manual.

### Application data

When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

# SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into [⚠️ WARNINGS] and [⚠️ CAUTIONS]. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the [⚠️ WARNINGS] and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [⚠️ CAUTIONS]. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- The meaning of "Marks" used here are as shown on the right.

**⊘ Never do it under any circumstance.**      **⚠️ Always do it according to the instruction.**

- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user
- This unit complies with EN61000-3-3.

For outdoor unit, EN61000-3-2 is not applicable as consent by the utility company or notification to the utility company is given before usage. (Only 224, 280)

For outdoor unit, EN61000-3-12 is not applicable as consent by the utility company or notification to the utility company is given before usage. (Only 335)

### ⚠️ WARNING

- ⚠️ Installation must be carried out by the qualified installer.  
If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.
- Install the system in full accordance with the instruction manual.  
Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
- Use the original accessories and the specified components for installation.  
If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149.  
Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.
- Ventilate the working area well in the event of refrigerant leakage during installation.  
If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- After completed installation, check that no refrigerant leaks from the system.  
If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.
- Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support.  
An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.
- Install the unit in a location with good support.  
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.  
Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.  
Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
- Be sure to shut off the power before starting electrical work.  
Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.  
Unconformable cables can cause electric leak, anomalous heat production or fire.
- Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.  
Loose connections or cable mountings can cause anomalous heat production or fire.
- Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.  
Incorrect installation may result in overheating and fire.
- In connecting the power cable, make sure that no anomalies such as dust deposits, socket clogging or wobble are found and insert the plug securely.  
Accumulation of dust, clogging on the socket, or looseness of plugging can cause electric shocks and fire.
- Be sure not to reuse existing refrigerant pipes.  
Conventional refrigerant oil or chlorine contained in the conventional refrigerant which is remaining in the existing refrigerant pipes can cause deterioration of refrigerant oil of new unit. And 1.6 times higher pressure of R410A refrigerant than conventional one can cause burst of existing pipe, personal injury or serious accident.
- Do not perform brazing work in the airtight room  
It can cause lack of oxygen.
- Use the prescribed pipes, flare nuts and tools for R410A.  
Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.  
Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.
- Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.  
If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
- Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulphide gas can occur.  
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. It can also cause the corrosion of the indoor unit and resultant unit failure or refrigerant leak.
- Only use prescribed option parts. The installation must be carried out by the qualified installer.  
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- Do not perform any change of protective device itself or its setup condition  
The forced operation by short-circuiting protective device of pressure switch and temperature control or the use of non specified component can cause fire or burst.
- Be sure to switch off the power source in the event of installation, inspection or servicing.  
If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- Consult the dealer or an expert regarding removal of the unit.  
Incorrect installation can cause water leaks, electric shocks or fire.
- Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.  
If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.
- Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.  
If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- Do not run the unit with removed panels or protections  
Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- Be sure to fix up the service panels.  
Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.  
If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

### ⚠️ CAUTION

- ⚠️ Use the circuit breaker for all pole with correct capacity.  
Using the incorrect circuit breaker, it can cause the unit malfunction and fire.
- Take care when carrying the unit by hand.  
If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
- Dispose of any packing materials correctly.  
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit.  
If weld spatter entered into the indoor unit during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it.
- Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.  
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.  
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- Perform installation work properly according to this installation manual.  
Improper installation can cause abnormal vibrations or increased noise generation.
- Carry out the electrical work for ground lead with care.  
Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or ignition.
- Earth leakage breaker must be installed.  
If the earth leakage breaker is not installed, it can cause fire or electric shocks.
- Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.  
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
- Do not install the unit near the location where leakage of combustible gases can occur.  
If leaked gases accumulate around the unit, it can cause fire.
- Do not install the unit where corrosive gas (such as sulphurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where flammable combustible substances are handled.  
Corrosive gas can cause corrosion of heat exchanger, leakage of plastic parts and etc. And combustible gas can cause fire.
- Secure a space for installation, inspection and maintenance specified in the manual.  
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.  
If safety facilities are not provided, it can cause personal injury due to falling from the installation place.
- Do not install the outdoor unit in a location where it generates electromagnetic fields or high frequency harmonics.  
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.
- Do not install the outdoor unit in a location where insects and small animals can inhabit.  
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.
- Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.  
Using an old and damaged base flame can cause the unit falling down and cause personal injury.
- Do not install the unit in the locations listed below.
  - Locations where carbon fiber, metal powder or any powder is floating.
  - Locations where any substances that can affect the unit such as sulphide gas, chlorine gas, acid and alkaline can occur.
  - Vehicles and ships
  - Locations where cosmetic or special sprays are often used.
  - Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
  - Locations where any machines which generate high frequency harmonics are used.
  - Locations with salty atmospheres such as coastlines
  - Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual)
  - Locations where the unit is exposed to chimney smoke
  - Locations at high altitude (more than 1000m high)
  - Locations with ammoniac atmospheres (e.g. organic fertilizer)
  - Locations with calcium chloride (e.g. snow melting agent)
  - Locations where heat radiation from other heat source can affect the unit
  - Locations without good air circulation.
  - Locations with any obstacles which can prevent inlet and outlet air of the unit
  - Locations where short circuit of air can occur (in case of multiple units installation)
  - Locations where strong air blows against the air outlet of outdoor unit
- It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.
- Do not install the outdoor unit in the locations listed below.
  - Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
  - Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc.
  - Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
  - Locations where vibration and operation sound generated by the outdoor unit can affect seriously.  
(on the wall or at the place near bed room)
  - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
  - Locations where drainage cannot run off safely.
- It can affect surrounding environment and cause a claim
- Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.  
It can cause the damage of the items.
- Do not touch any buttons with wet hands  
It can cause electric shocks
- Do not shut off the power source immediately after stopping the operation.  
Wait at least 5 minutes, otherwise there is a risk of water leakage or breakdown.
- Do not control the system with main power switch.  
It can cause fire or water leakage. In addition, the fan can start unexpectedly, which can cause personal injury.
- Do not touch any refrigerant pipes with your hands when the system is in operation.  
During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.
- Do not operate the outdoor unit with any article placed on it.  
You may incur property damage or personal injury from a fall of the article.
- Do not step onto the outdoor unit.  
You may incur injury from a drop or fall.

**Notabilia as a unit designed for R410A**

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A unit designed for R410A has adopted a different size outdoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Please check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)




Dedicated R410A tools	
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

**1. BEFORE BEGINNING INSTALLATION** (Check that the models, power source specifications, piping, wiring are correct.)

**Caution**

- Be sure to read this manual before installation to follow the proper installation methods.
- When installing the indoor unit, read the installation manual of indoor unit.
- Option distribution parts are required for the piping (Branch pipe set, header set). For details, refer to the catalog, etc.
- Make sure to install the earth leakage breaker. (Select a product compatible with high frequency.)
- There is risk of damaging the compressor if the unit is operated while the discharge pipe temperature sensor, suction pipe temperature sensor, pressure sensor, etc. are removed. Never attempt to operation in such condition.
- With this air-conditioning system, room temperature may rise, depending on installation conditions, while indoor units are stopped, because small quantity of refrigerant flows into the stopped indoor units if heating operation is conducted on the system.

**Accessory**

Name	Quantity	Location of use	
Wire 	2	Insert this in CnG on the outdoor unit PCB when using the silencing mode or forced cooling mode	Secured in the control box with adhesive tape.
Edging 	1	Use it for protection of a knock-out hole.	It is attached to the bracket with an adhesive tape in the proximity of the service valve.
Attached wire 	1	Use this when connecting gas pipe.	Attached on the base below the service valve.
Instruction manual	1	When the installation work is completed, give instructions to the customer and ask him/her to keep it.	Attached on the base below the service valve.

**Combination pattern**

- Combination pattern of outdoor units, number of indoor units connected and capacity of connection are as show in the table at right.
- It can be used in combination with the following indoor unit.

Indoor unit	Remote control		Connection OK/NO	Outdoor unit		Indoor unit	
	Capacity	Combination pattern		Number of units connected (unit)	Range of total capacity of connected indoor units		
FD $\bigcirc$ $\Delta$ $\Delta$ KXE6	RC-E3 (2 cores), RC-E4 (2 cores), RC-E5 (2 cores), RC-EX1A (2 cores)	OK	224	Single	1-22	112-336	
FD $\bigcirc$ $\Delta$ $\Delta$ KXE4R, KXE4BR, KXE5R	RC-E1R (3 cores)	NO	280	Single	1-24	140-420	
FD $\bigcirc$ $\Delta$ $\Delta$ KXE4, KXE4(A), KXE4A	RC-E1 (3 cores)	NO	335	Single	1-24	167-502	

**[Items sold separately]**

Refrigerant pipe distribution parts, which are not contained in the package, will be required for installation. As for refrigerant pipe distribution parts, we offer branching pipe sets (Model type: DIS) and header sets (Model type: HEAD) as parts used on the indoor side of piping. Please select one suiting your application. In selecting distribution parts, please also refer to "4. REFRIGERANT PIPING." If you are not sure which parts to select, please consult with your dealer or the manufacture. Use refrigerant branching pipe sets and header sets designed exclusively for R410A without fail.

**2. INSTALLATION LOCATION** (Obtain approval from the customer when selecting the installation area.)

**2-1. Selecting the installation location**


- Where air is not trapped.
- Where the installation fittings can be firmly installed.
- Where any object does not prevent inlet or outlet air.
- Out of the heat range of other heat sources.
- Where strong winds will not blow against the outlet air.
- A place where stringent regulation of electric noises is applicable.
- Where it is safe for the drain water to be discharged.
- Where noise and hot air will not bother neighboring residents.
- Where snow will not accumulate.
- A place where no TV set or radio receiver is placed within 5m. (If electrical interference is caused, seek a place less likely to cause the problem)
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

**Please note**


- If there is a possibility of a short-circuit, then install a flex flow adapter.
- When installing multiple units, provide sufficient intake space so that a short-circuit does not occur.
- In areas where there is snowfall, install the unit in a frame or under a snow hood to prevent snow from accumulating on it. (Inhibition of collective drain discharge in a snowy country)
- Do not install the equipment in areas where there is a danger for potential explosive atmosphere.
- Install the equipment in a location that can sufficiently support the weight of the equipment.
- If a unit is installed into a special environment as shown below, there will be a danger that the corrosion of the outdoor unit or its malfunctioning is caused. If this is the case, please consult with the distributor from whom you have purchased the unit.
  - Where corrosive gas is generated (such as a hot-spring resort area).
  - Where the unit is subject to sea breezes (coastal area).
  - Where the unit is subject to oil mists.
  - Where equipment generating electromagnetic waves exists in the vicinity.
- When strong winds occur
  - Where it is likely that the unit is subjected to strong winds, provide wind guards according to the following guidelines. Strong winds can cause performance degradation, an accidental stop due to a rise of high pressure and a broken fan.

**CAUTION**  
Please leave sufficient clearance around the unit without fail. Otherwise, a risk of compressor and/or electric component failure may arise.


① Place the unit outlet pipe perpendicular to the wind direction.

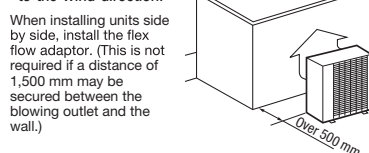

② Please install so the direction of the air from the blowing outlet will be perpendicular to the direction of the wind.

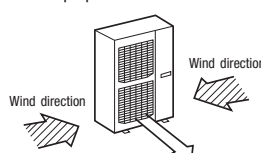


③ When the foundation is not level, use wires to tie down the unit.

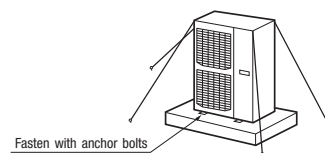

## 2-2. Installation space (Ex. servicing space)

- a) Minimum installation space  
(Please select an installation point with due attention to the direction of installation of the refrigerant pipe)  
(if the installation conditions shown in this drawing are not satisfied, please consult with your dealer or the manufacturer.)
- b) When two or more units are installed in a line, secure a service space of minimum 250 mm between each pair of neighboring units. The units can be operated, however, if they are separated by more than 10 mm each other. Where this minimum space is not available, it may be adapted by moving one of the units, for example, during the service work.
- c) Don't install at a place where it will be surrounded with walls in four directions.  
Even when it is not surrounded with walls in four directions and it is met the installation conditions as shown by this figure, if there is risk of short-circuit, install the flex flow adaptor to prevent the short-circuit.
- d) There must be a 1-meter or larger space in the above.
- e) A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

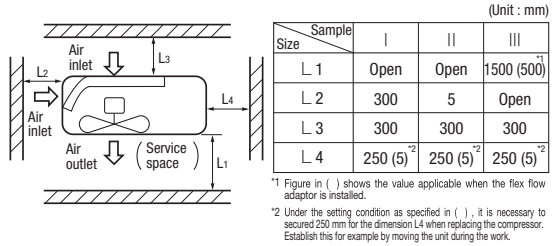

## 3. Unit delivery and installation


**Caution** Attach the ropes on the unit and carry it in avoiding displacement of gravity center. Improper slinging may cause the unit to lose balance and fall.

### 3-1. Delivery

- Deliver the unit in the packing to the specified installation place.
- To hoist the unit, attach a pair of textile ropes with cushion materials attached to protect it.



#### Request

Put cushion materials between the unit and the ropes to avoid damages.

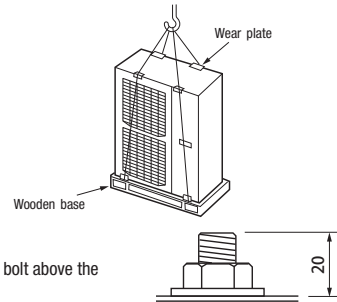

### 3-2. Cautions for installation

- Make sure to lock the fixing legs of outdoor unit with 4 pieces of anchor bolt (M10). Best margin of protrusion for bolt above the floor is 20 mm.
- When installing the unit, make sure to lock its legs with the following bolts.

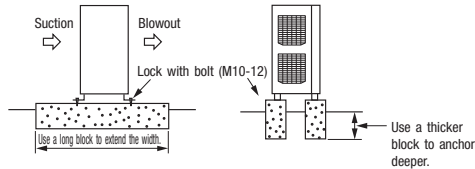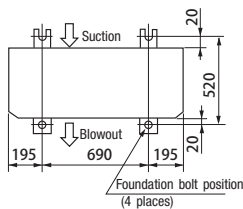

- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
  - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
  - Refer to the above illustrations for information regarding concrete foundations.
  - Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

**Important** In case that the unit operates in cooling mode, when the outdoor temperature is  $-5^{\circ}\text{C}$  or lower, please equip a flex flow adapter and a snow guard hood (option) on the unit.

## 4. REFRIGERANT PIPING


### 4-1. Determination of piping specifications (Please select from the following matrix according to indoor unit specifications and installation site conditions)

#### (1) Limitation on use of pipes

- When arranging pipes, observe the restrictions on use concerning the longest distance of (1), total piping length, allowable pipe length from initial branching and allowable difference of height (difference between heads).
- Avoid any trap ( ) or bump ( ) in piping as they can cause fluid stagnation.
- Maximum length (To the furthest indoor unit) ... Actual length Less than 160 m (Actual length less than 185 m)  
It is required to change the pipe diameter when the actual length exceeds 90 m.  
Determine the size of main pipe, referring to the table of main pipe selection table of (3) (a).
- Total piping length ..... 510 m or less
- Length of main pipe ..... 130 m or less
- Allowable pipe length from initial branching ..... 90 m or less
- Difference in pipe lengths between indoor units, however, is 40 m or less.
- Allowable difference in height (Difference of heads)
  - (a) When an indoor unit is positioned at a higher place ..... 50 m or less
  - (b) When an outdoor unit is positioned at a lower place ..... 40 m or less
  - (c) Difference of heights between indoor units in a system ..... 18 m or less
  - (d) Difference of heights between initial branching and indoor unit ... 18 m or less

#### CAUTION

Make sure to install within the range of limitation. Otherwise, resulting malfunction of compressor may not be warranted. Observe always the limitation of use during installation.

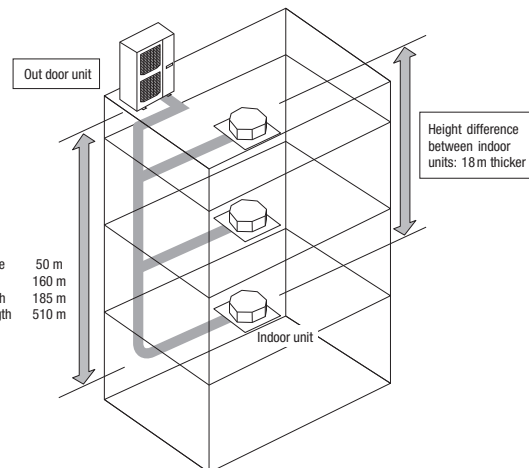

#### (2) Selection of pipe material

- Use pipes with the inside clean and free from any harmful sulfur, oxides, dirt, chips & oil, or moisture (contamination).
- Use following refrigerant pipes.  
Material ... Phosphate deoxidation treated seamless pipe (C1220T-O, 1/2H, JIS H 3300) C1220T-1/2H for O.D.  $\phi 19.05$  or more, or C1220T-O for  $\phi 15.8$  or less
- Wall thickness and size - Select according to the guide for pipe size selection  
(This product uses R410A. Since, in case of pipes in the size of  $\phi 19.05$  or more, materials of -O lacks sufficient capacity to withstand pressure, make sure to use pipes of 1/2H material and thickness larger than the minimum thickness.)
- When a pipe is branched, make sure to use our branching set or header set.
- When setting branching pipes, take care of the mounting direction and consult carefully with the instruction manual.
- Regarding the handling of service valve, refer to 4-3 (1) Operating method of service valve.

(3) Pipe size selection

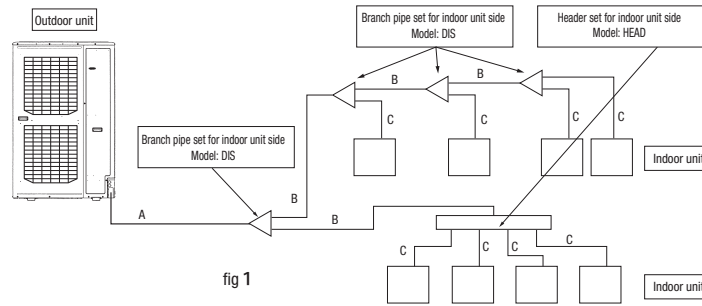


fig 1

(a) Main pipe (Between branch at outdoor unit side - initial branch at indoor unit side): Section A in Fig. 1

When the maximum length (to the furthest indoor unit from outdoor unit) is 90 m or more (actual length), change the size of main pipe as shown by the following table.

Outdoor unit	Main pipe size (Ordinary)		Pipe size for actual length longer than 90 m	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
224	ø19.5×t1.0	ø9.52×t0.8	ø22.22×t1.0	ø12.7×t0.80
280	ø22.22×t1.0		ø25.4(ø22.22)×t1.0	
335	ø25.4(ø22.22)×t1.0	ø12.7×t0.8		

Make sure to use the attached pipes in the length as shown at left.

For ø19.05 or larger, use C1220T-1/2H material.

(b) Between initial branch at indoor unit side- indoor unit side: Section B in Fig. 1

Select from following table based on the total capacity of indoor units connected at the downstream side. However, it should never exceed the size of main pipe (Section A in Fig. 1).

Total capacity of indoor units	Gas pipe	Liquid pipe
Less than 70	ø12.7 ×t1.0	ø 9.52×t0.8
70 - 180	ø15.88×t1.0	
180 - 371	ø19.05×t1.0 *1	ø12.7×t0.8
371 - 540	ø25.4(ø22.22)×t1.0	ø15.88×t1.0

For ø19.05 or larger, use C1220T-1/2H material.

\*1: When connecting indoor units of 280 at the downstream and the main gas pipe is of ø22.22 or larger, use the pipe of ø22.22x t1

(c) Between branching at indoor unit side - indoor unit side: Section C in Fig. 1

According to the table of pipe size for indoor unit. However, it should never exceed the size of main pipe (Section A in Fig. 1).

Indoor unit	Capacity	Gas pipe	Liquid pipe
		22, 28	ø 9.52×t0.8
36, 45, 56		ø 12.7×t0.8	
71, 80, 90, 112, 140, 160		ø15.88×t1.0	ø9.52×t0.8
224		ø19.05×t1.0	
280		ø22.22×t1.0	

For ø19.05 or larger, use C1220T-1/2H material.


(4) Selection of the branch set for indoor unit side

(a) Selection of the branch pipe set

- Size of branch pipe varies depending on the capacity of connected indoor units (total capacity at downstream). Select it from the table at right.

Request

- Adjust the indoor unit and the size of branch pipe at the indoor unit side according to the size of pipe connected to indoor unit.
- Install the branch joint (both of gas and fluid) so that it will become "Horizontal branching" or "Vertical branching".

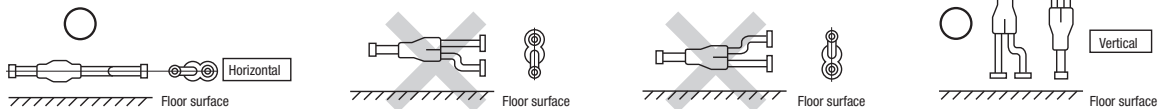


Total capacity at downstream	Branch pipe set
Less than 180	DIS-22-1G
180 - 371	DIS-180-1G
371 - 540	DIS-371-1G

(b) Selection of the header set

- Connect a plugged pipe (field provided) at the branch point (indoor unit connecting side) depending on the number of units connected.
- For the size of plugged pipe, refer to the header set (option item).

Request




- Adjust the header and indoor unit pipes to the size of pipes for connected indoor units.
- Install the header at the gas side to be "Horizontal branching" and, at the fluid side, that the branch is provided at the downstream side.
- Header is not allowed to receive indoor units of 224 or 280.

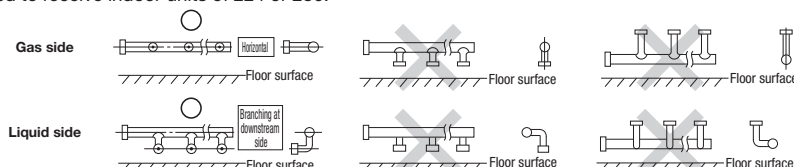

Total capacity at downstream	Header set model	Number of branches
Less than 180	HEAD4-22-1G	Max. 4 branches
180 - 371	HEAD6-180-1G	Max. 6 branches
371 - 540	HEAD8-371-2	Max. 6 branches

## 4-2. Piping work

### (1) Pipe connecting position and pipe outgoing direction

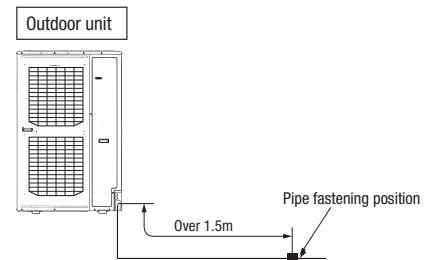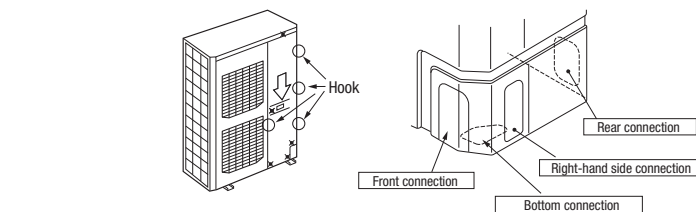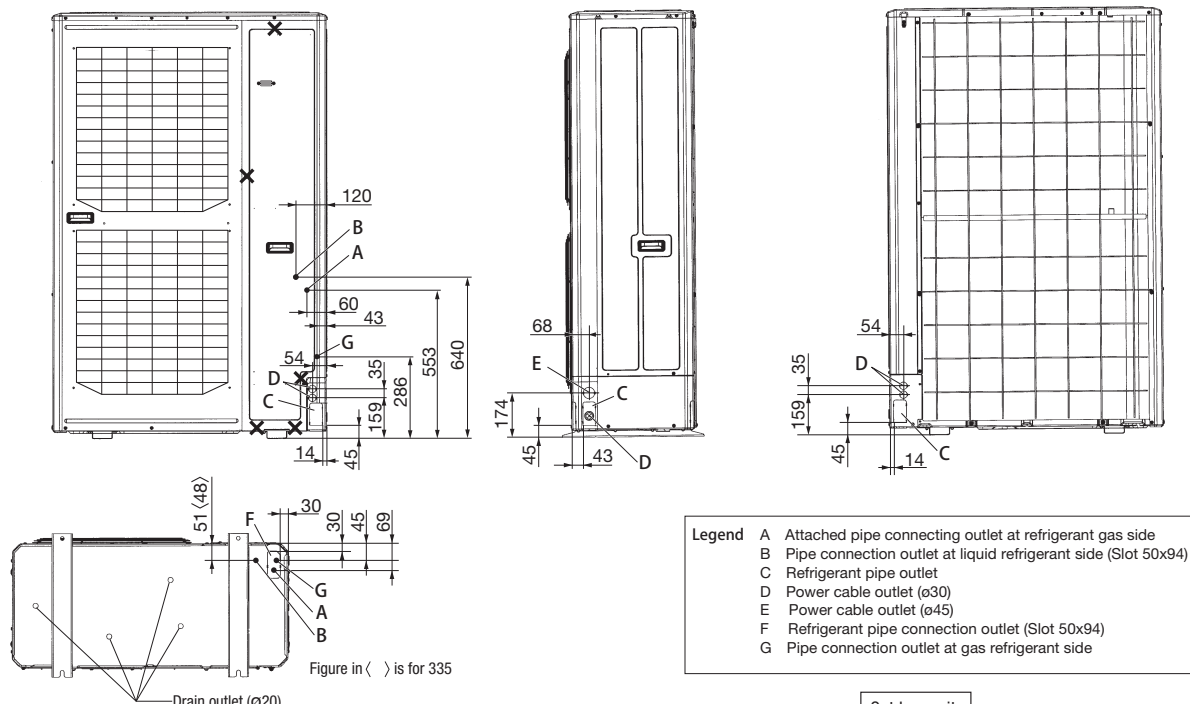

- First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.
- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- In laying pipes on the installation site, cut off the casing's half blank that covers a hole for pipe penetration with nippers.
- If there is a risk of small animals entering from the pipe penetration part, close the part with some sealing material or the like (to be arranged on the installer's part).
- In the case of an installation using a collective drain system, use a port other than the bottom one to take out cables and pipes. If the bottom port is used, seal it thoroughly so that drain water may not spill out.
- Use an elbow (to be arranged on the user's part) to connect control valves to the piping.
- In anchoring piping on the installation site, give 1.5m or a longer distance between an outdoor unit and an anchoring point where the piping is secured as illustrated below. (A failure to observe this instruction may result in a pipe fracture depending on a method of isolating vibrations employed.)
- The pipe should be anchored every 1.5m or less to isolate the vibration.

### (2) Field piping work

#### Important

- Please take care so that installed pipes may not touch components within a unit.
- **During the pipe installation at site, keep the service valves shut all the time.**
- Give **sufficient protections** (compressed and brazed or by an adhesive tape) **to pipe ends so that any water or foreign matters may not enter the pipes.**
- In bending a pipe, bend it **to the largest possible radius (at least four times the pipe diameter)**. Do not bend a pipe repeatedly to correct its form.
- An outdoor unit's pipe and refrigerant piping are to be flare connected. Flare a pipe after engaging a flare nut onto it. A flare size for R410A is different from that for conventional R407C. Although we recommend the use of flaring tools developed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- Be sure to use the accessory pipe for connection to the gas service valve. For details, refer to the installation manual of the accessory pipe.
- Tighten a flare joint securely **with two spanners**. Observe flare nut tightening torque specified in the table below.

#### CAUTION


If you tighten it without using double spanners, you may deform the service valve, which can cause an inflow of nitrogen gas into the outdoor unit.

Copper pipe outer diameter	Flare nut parallel side measurement: H (mm)		A	Flared pipe end: A (mm)		Copper pipe protrusion for flaring: B (mm)	In the case of a rigid (clutch) type	
	φ	H		φ	A		With an R410A tool	With a conventional tool
φ 6.35	17	0	9.1	0 -0.4	0-0.5	0.7-1.3		
φ 9.52	22	9.1	13.2					
φ 12.7	26	13.2	16.6					
φ 15.88	29	16.6	19.7					
		19.7						



For service valves both at the fluid and gas sides, fix the valve body and tighten to adequate torque as shown at right.


Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of tool handle (mm)
Ø6.35 (1/4")	14-18	45-60	150
Ø9.52 (3/8")	34-42	30-45	200
Ø12.7 (1/2")	49-61	30-45	250
Ø15.88 (5/8")	68-82	15-20	300
Ø19.05 (3/4")	100-120	15-20	450

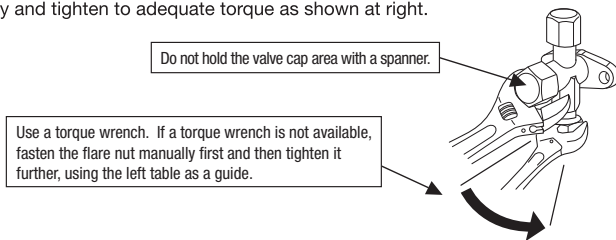


- Do not apply any oil on a flare joint.
- **Blazing must be performed under a nitrogen gas flow.** Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.
- Brazing of the service valve and the pipes should be performed while cooling the valve body with a wet towel.
- Perform flushing. To flush the piping, charge nitrogen gas at about 0.02 MPa with a pipe end closed with a hand. When pressure inside builds up to a sufficient level, remove the hand to flush. (in flushing a pipe, close the other end of the pipe with a plug).

**Operation procedure**


- 1 **During the pipe installation at site, keep the service valves shut all the time.**
- 2 **Blazing must be performed under a nitrogen gas flow.** Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

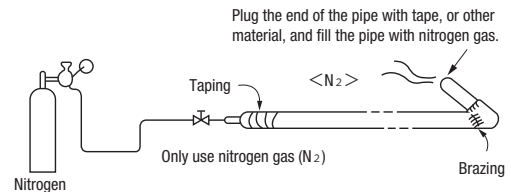

- 3 Give **sufficient protections** (compressed and brazed or with an adhesive tape) **so that water or foreign matters may not enter the piping.**

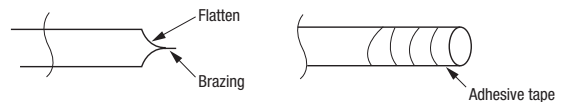

- 4 Perform flushing. To flush the piping, charge nitrogen gas at about 0.02 MPa with a pipe end closed with a hand. When pressure inside builds up to a sufficient level, remove the hand to flush. (in flushing a pipe, close the other end of the pipe with a plug).

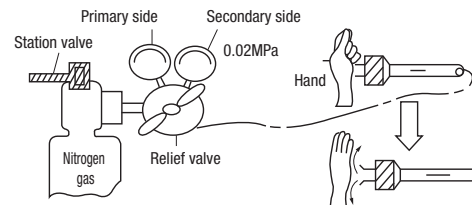


**4-3. Air tightness test and air purge**

(1) Air tightness test

- 1 Although an outdoor unit itself has been tested for air tightness at the factory, please check the connected pipes and indoor units for air tightness from the check joint of the service valve on the outdoor unit side. While conducting a test, **keep the service valve shut all the time.**
- 2 Since refrigerant piping is pressurized to the design pressure of a unit with nitrogen gas for testing air tightness, please connect instruments according to the drawing below. Under no circumstances should chlorine-based refrigerant, oxygen or any other combustible gas be used to pressurize a system. **Keep the service valve shut all the time.** Do not open it under any circumstances. **Be sure to pressurize all of the liquid, gas pipes.**
- 3 In pressurizing the piping, do not apply the specified level of pressure all at once, but gradually raise pressure.
  - a) **Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes or more** to see if the pressure drops.
  - b) **Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes** to see if the pressure drops.
  - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
  - d) **If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable.** When the ambient temperature changes 1°C, the pressure also changes approximately 0.01 MPa. The pressure, if changed, should be compensated for.
  - e) If a pressure drop is observed in checking e) and a) – d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- 4 Always pull air from the pipes after the airtightness test.

**CAUTION**  
Applying excessive pressure can cause an inflow of nitrogen gas into an outdoor unit.

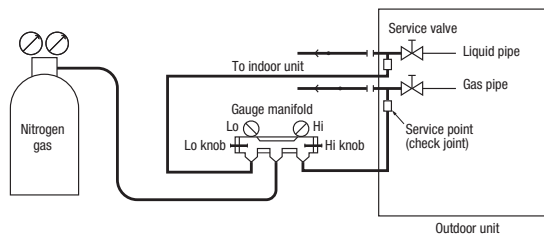


Standard torque at sections on service valve

Service valve size (mm)	Shaft tightening torque (N·m)	Cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
Ø9.52 (3/8")	6-8	20-30	10-12
Ø12.7 (1/2")	14-16	25-35	10-12
Ø19.05 (3/4")	3	30-35	12-14

Securely tighten the cap and the blind nut after the adjustment. Avoid applying any excessive force when operating the shaft or when tightening the cap or blind nut. Otherwise, it could cause malfunction or leakage from the shaft, cap or blind nut.


▶Allen wrench type

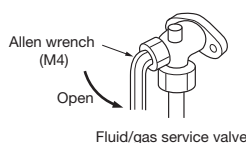

- Open the valve stem till it hits the stopper. No need to apply force more than that.
- After the adjustment, replace the blind nut as it was.

▶Pin type


Remove the cap and adjust as shown below

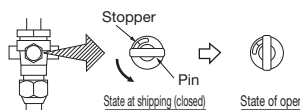

- After the adjustment, replace the cap as it was.

(2) Air purge

Perform the air purge from both the check joints at fluid side and gas side.

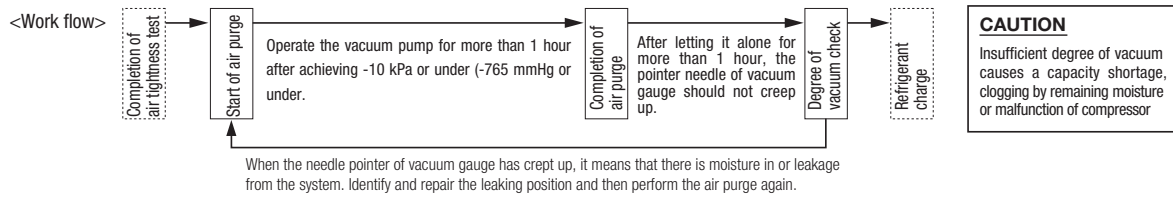

This product uses R410A. Take care of the following points.

- To avoid contamination with different type of oil, use separate tools depending on the type of refrigerant. It is prohibited especially to use the gauge manifold and the charge hose for different types of refrigerant (R22, R407C).
- Use a reverse flow prevention adaptor to prevent the contamination of refrigerant system with vacuum pump oil.

4-4. Additional charge of refrigerant

● Refrigerant must be in the state of fluid when charging.

● Make sure to use a measuring device when charging the refrigerant.

When it cannot charge whole required quantity because the outdoor unit is stopped, operate the unit in the test run mode and charge. (See Section 8 for the method of test run.) Operating the unit for a long period of time with insufficient quantity of refrigerant could cause malfunction on the compressor. (When charging while operating the unit, especially, complete the charge within 30 minutes.)

This unit contains 11.5 kg of refrigerant.

Calculate necessary quantity of additional charge with the following formula, and record the quantity of additionally charged refrigerant on the refrigerant quantity list provided on the back of service panel.

● Charge the additional refrigerant depending on the size and length of fluid pipe. Determine the quantity of additional charge by rounding the second place after decimal point, which means in the unit of 0.1 kg.

$$\text{Additional charge quantity (kg)} = 2.5 + (L3 \times 0.17) + (L4 \times 0.11) + (L5 \times 0.054) + (L6 \times 0.022)$$

Standard additional refrigerant quantity

Charge quantity for the refrigerant piping

Make sure to charge this quantity in addition to the charge quantity for the refrigerant piping.

L3: Tot al length of ø15.88 pipes (m), L4: Total length of ø12.7 pipes (m)

L5: Total length of ø0.952 pipes (m), L6: Total length of ø6.35 pipes (m)

Refrigerant pipe size	ø15.88	ø12.7	ø9.52	ø6.35	Remark
Additional charge quantity(kg/m)	0.17	0.11	0.054	0.022	

● This product uses R410A. Take care of the following points.

- To avoid contamination with different type of oil, use separate tools depending on the type of refrigerant. It is prohibited especially to use the gauge manifold and the charge hose for different types of refrigerant (R22, R407C).
- Type of refrigerant is indicated with the color painted on the container (Yellow for R140A). Sufficient care must be taken to use correct refrigerant only.
- Never use a charge cylinder. Otherwise, the composition of refrigerant may change when introducing R410A into the cylinder.
- Make sure to charge the refrigerant in the state of fluid.

● Request

Record the refrigerant quantity calculated based on the piping length in the refrigerant quantity list provided on the back of service panel.

**THE LABEL FOR THE QUANTITY OF REFRIGERANT**

● Charge specified quantity of refrigerant.

● Record the quantity of refrigerant in the condition of moisture.

● Additional charge of refrigerant

1. The unit has been charged with 11.2 kg of refrigerant.

2. Enter the length of fluid pipe for each size in the table column. Charge the amount of refrigerant in the quantity of 24, the standard additional charge quantity (A) in (B), the additional charge quantity for the refrigerant pipe which is obtained by calculation.

● Standard additional refrigerant quantity (A)

● Charge quantity for refrigerant pipe (B)

● Total charge quantity of refrigerant (C)

● Additional charge quantity (D) = (C) - (A)

● Total charge quantity of refrigerant (E) = (C) + (D)


● Factory charge (F) = (C) - (D)

● Total charge quantity of refrigerant (G) = (E) + (F)

● Total Charge on the attached if Gas Leak

Refrigerant quantity label

**CAUTION**  
Make sure to enter the data. The data is required at maintenance or service.

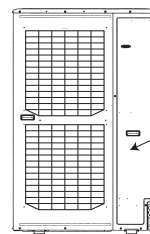

Attached on the back of service panel.


4-5. Heat insulation and moisture condensation proof

(1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.

Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.


(2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.

- All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
- Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
- Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
- Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20mm, or over, heat insulation materials additionally above the ceiling where relative humidity exceeds 70%.

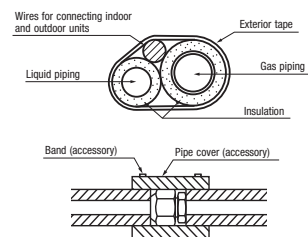

5. Drainage

- Where water drained from the outdoor unit may freeze, connect the drain pipe using optional drain elbow and drain grommet.
- Outdoor unit has 4 drain outlets on the bottom.
- When guiding drain water to a scupper, etc, install the parts on a flat stand (optional item), blocks, or other.
- Connect the drain elbow as shown by the figure. Seal remaining holes with grommets.
- When draining water collectively, use holes for wires and pipes opened other than on the bottom. When this is impracticable, sufficiently seal the drain pipe to prevent water leakage.

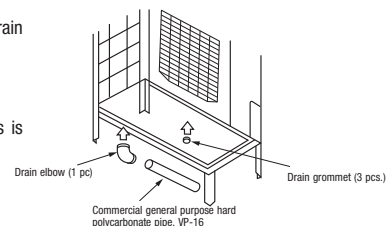


## 6. Electric wiring

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.  
**⚠ Please install an earth leakage breaker without fail.** The installation of an earth leakage breaker is compulsory in order to prevent electric shocks or fire accidents.  
 (Since this unit employs inverter control, please **use an impulse withstanding type** to prevent an earth leakage breaker's false actuation.)

### Please note

- Use only copper wires.  
Do not use any supply cord lighter than one specified in parentheses for each type below.
  - braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
  - ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
  - flat twin tinsel cord (code designation 60227 IEC 41)
  - ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53).
 Please do not use anything lighter than polychloroprene sheathed flexible cord (cord designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Use separate power source for the indoor and outdoor units.**
- The power source for indoor units in the same system should turn on and off simultaneously.**
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire. A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable. If improperly grounded, an electric shock or malfunction may result.
- The installation of an impulse with standing type earth leakage breaker is necessary.** A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire. Do not turn on the power until the electrical work is completed. Be sure to turn off the power when servicing.
- Please do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident.)
- For power source cables, use conduits.
- do not lay electronic control cables (remote control and signaling lines) and other high current cables together outside the unit.** Laying them together can result in malfunctioning or a failure of the unit due to electric noises.
- Power cables and signaling lines must always be connected to the terminal block and secured by cable fastening clamps provided in the unit.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, please make sure that all electrical components within the electrical component box are not free or not loose on the terminal connection** and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Make sure to use circuit breakers (earth leakage breaker and circuit breaker) of proper capacity. Use of breakers of larger capacity could result in trouble on components or fire accident. The circuit breaker should isolate all poles under over current.
- Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1.
- After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured.

### 6-1. Wiring system drawing

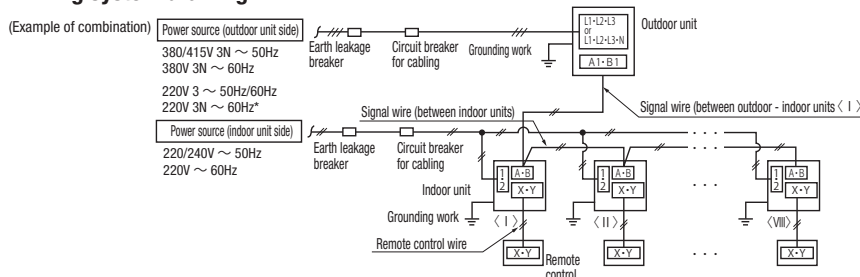

\*Do not connect N-phase wire to the unit when the power source is 3-phase and 4-wire.

### CAUTION

If the earth leakage breaker is exclusively for ground fault protection, then you will need to install a circuit breaker for wiring work.


### 6-2. Power source connection

#### (1) Method of leading out cables

- As shown on the drawing in Section 4-2, cables can be laid through the front, right, left or bottom casing.
- In wiring on the installation site, cut off a half-blank covering a penetration of the casing with nippers.
- In the case of an installation using a collective drain system, use a port other than the bottom one to take out cables and pipes. If the bottom port is used, seal it thoroughly so that drain water may not spill out.

#### (2) Notabilia in connecting power cables

- Connect the ground wire before you connect the power cable. When you connect a grounding wire to a terminal block, use a grounding wire longer than the power cable so that it may not be subject to tension.
- Do not turn on power until installation work is completed. Turn off power to the unit before you service the unit.
- Ensure that the unit is properly grounded.
- Always connect power cables to the power terminal block.
- To connect a cable to the power terminal block, use a round crimp contact terminal.
- If two cables are to be connected to one terminal, arrange cables in such a manner that you put their crimp contact terminals together back to back. Further, put the thinner cable above the thicker one in arranging cables for such connection.
- Use specified wires in wiring, and fasten them securely in such a manner that the terminal blocks are not subject to external force.
- In fastening a screw of a terminal block, use a correct-size driver.
- Fastening a screw of a terminal block with excessive force can break the screw.
- When electrical installation work is completed, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection.

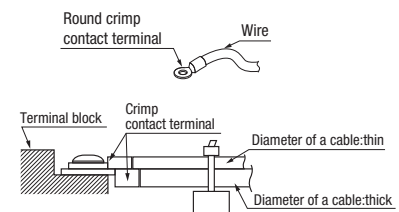

#### (3) Outdoor unit power source specification: 380/415V 3N~ 50Hz 380V 3N~ 60Hz 220V 3~ 60Hz

Model	Power source	Cable size for power source (mm <sup>2</sup> )	Wire length (m)	Moulded-case circuit breaker (A)		Earth leakage breaker	Earth wire	
				Rated current	Switch capacity		Size (mm <sup>2</sup> )	Screw type
224KXZME1 280KXZME1	Three-phase 380/415V 50Hz 380V 60Hz	5.5	54	30	30	30A, 30mA less than 0.1 sec	2	M5
335KXZME1								

### Please note

- The method of laying cables has been determined pursuant to the Japanese indoor wiring regulations (JEC8001). (Please adapt it to the regulations in effect in each country.)
- For details, please refer to the installation manual supplied with the indoor unit.



### 6-3. How to connect signal cables

The communication protocol can be chosen from following two types. One of them is the conventional Superlink (hereinafter previous SL) and the other is the new Superlink II (hereinafter new SL). These two communication protocols have the following advantages and restrictions, so please choose a desirable one meeting your installation conditions such as connected indoor units and central control. When signal cables are connected into a network involving outdoor units, indoor units or central control equipment that do not support new SL, please select communications in the previous SL mode, even if the refrigerant system is separated from theirs.

Communication protocol	Conventional communication protocol (previous SL)	New communication protocol (new SL)
Outdoor unit setting (SW5-5)	ON	OFF (Factory default)
No. of connectable indoor units	Max. 48	Max. 128
No. of connectable outdoor units in a network	Max. 48	Max. 32
No. of connectable outdoor units	Up to 1000m	Up to 2,000 m for wires other than shielding wire Up to 1,500 m for 0.75 mm <sup>2</sup> shielding wire (MVVS) Up to 1,000 m for 1.25 mm <sup>2</sup> shielding wire (MVVS)
Signal cable (furthest length)	Up to 1000m	Up to 1000m
Connectable units to a network	Units not supporting new SL (FD○A△△KXE4.5 series) Units supporting new SL (FD○△△KXE6 series, FD○△△KXZ series) Can be used together.	Units supporting new SL (FD○△△KXE6 series, FD○△△KXZ series)

Note: For FDT224 and 280 models, calculate the number of units taking 1 indoor unit as 2 units for the sake of communication.

- **Signal cables are for DC 5 V. Never connect wires for 220/240 V or 380/415 V.** Protective fuse on the PCB will trip.

- ① Confirm that signal cables are prevented from applying 220/240 V or 380/415 V
- ② Before turning the power on, check the resistance on the signal cable terminal block. If it is less than 100Ω, power source cables may be connected to the signal cable terminal block.

When units of FD○△△KXE6 Series, FD○△△KXE1 series are connected:

**Standard resistance value=5,100/Number of connected units.**

When units of FD○A△△KXE4 and 5 Series only are connected:

**Standard resistance value=9,200/Number of connected units.**

When units of FD○△△KXE6 Series, FD○△△KXE1 series and units of FD○A△△KXE4 and 5 Series are connected in a mixture:

**Standard resistance value=46,000/[(Number of connected FD○A△△KXE4 and 5 Series units x 5) + (Number of connected FD○△△KXE6 and KXZ Series units x 9)]**


The number of connected units includes those of indoor units, outdoor units and SL devices.

If the resistance value is less than 100Ω, disconnect the signal cables temporarily to divide to more than one network, to reduce the number of indoor units on the same network, and check each network.


#### Indoor and outdoor units signal cables

- Connect the signal line between indoor unit and outdoor unit to A1 and B1.
- Connect the signal line between outdoor units to A2 and B2.
- Please use a shielded cable for a signal line and connect a shielding earth at all the indoor units and outdoor units.


(1) When one outdoor unit is used.

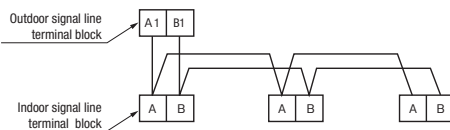


- Indoor and outdoor signal lines do not have a polarity. Any of the connections in the following illustration can be made.

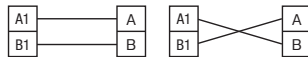


(1) The signal lines can also be connected using the method shown below.

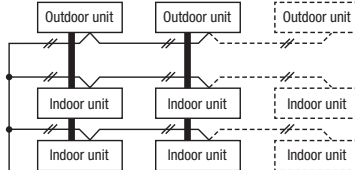


(2) When plural outdoor units are used

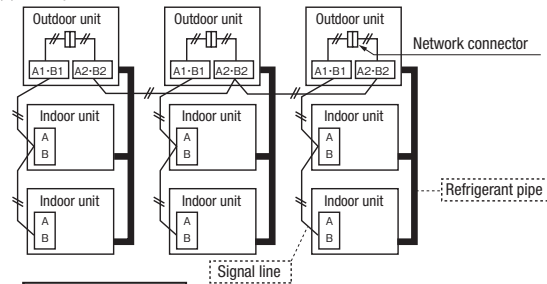

- ⚠ **Important** ○ Loop wiring prohibited.

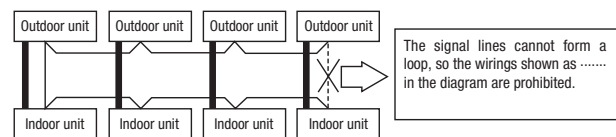

#### Power cable and signal cable connection

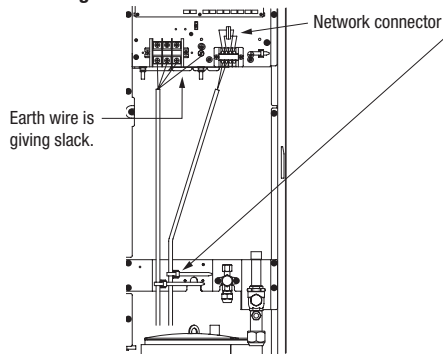

#### Wiring clamp

- Fix the cables not to exert external force to the terminal connection.
- Give adequate slack to cables in fastening them.
- Fix power cables separately from signal cables.

#### Outgoing cable direction


- As like the refrigerant pipe, it can be let out in any of 4 directions of right-hand side, front, rear and bottom.

#### Wiring label

- The wiring label is attached on the back of the service panel.

#### Request

- When connecting to the power source terminal block, use the crimp terminals for M5 as shown at right.
- When connecting to the signal terminal block, use the crimp terminals for M3.5 as shown at right.

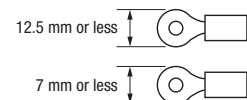

#### Remote control wiring specifications

- For the remote control the standard wire is 0.3 mm<sup>2</sup>. The max. length is up to 600 m. When the wire is more than 100 m long, use the wire shown in the table.
- Use 3-core wires for FD○A△△KXE4 or 2-core wires for FD○△△KXE6.

Length (m)	Wire size
Within 100 - 200	0.5mm <sup>2</sup>
Within - 300	0.75mm <sup>2</sup>
Within - 400	1.25mm <sup>2</sup>
Within - 600	2.0mm <sup>2</sup>

## 7. CONTROL SETTINGS

### 7-1. Unit address setting

This control system controls the controls of more than one air-conditioner's outdoor unit, indoor unit and remote control unit through communication control, using the microcomputers built in the respective controls. Address setting needs to be done for both outdoor and indoor units. Turn on power in the order of the outdoor units and then the indoor units.

**Use 1 minute as the rule of thumb for an interval between them.**

The communication protocol can be chosen from following two types. One of them is the conventional communication protocol (previous SL) and the other is the new communication protocol (new SL). These two communication protocols have their own features and restrictions as shown by Table 6-3. Select them according to the indoor units and the central control to be connected.

When signal cables are connected into a network involving outdoor units, indoor units or central control equipment that do not support new SL, please select communications in the previous SL mode, even if the refrigerant system is separated from theirs.

**When communication is established after setting addresses, check the communication protocol with the 7-segment display panel of the outdoor unit.**

#### ●Address setting methods


The following address setting methods can be used. The procedure for automatic address setting is different from the conventional one. Please use the automatic address setting function after reading this manual carefully.

Communication protocol	Address setting method	new SL		previous SL	
		Automatic	Manual	Automatic	Manual
When plural refrigerant systems are linked with signal lines (e.g., to implement central control)	Case 1 When signal lines linking plural refrigerant systems are provided between outdoor units. (When the network connector is disconnected, refrigerant systems are separated each other)	OK*1	OK	×	OK
	Case 2 When signal lines linking plural refrigerant systems are provided between indoor units.	×	OK	×	OK
When only one refrigerant system is involved (signal lines do not link plural refrigerant systems)		OK	OK	OK	OK

※1 Do not connect the signal line between outdoor units to A1 and B1. This may interrupt proper address setting. (Case 3)

Do not connect the signal line between indoor unit and outdoor unit to A2 and B2. This may interrupt proper address setting. (Case 4)


※2 In Case 2, automatic address setting is not available. Set addresses manually.

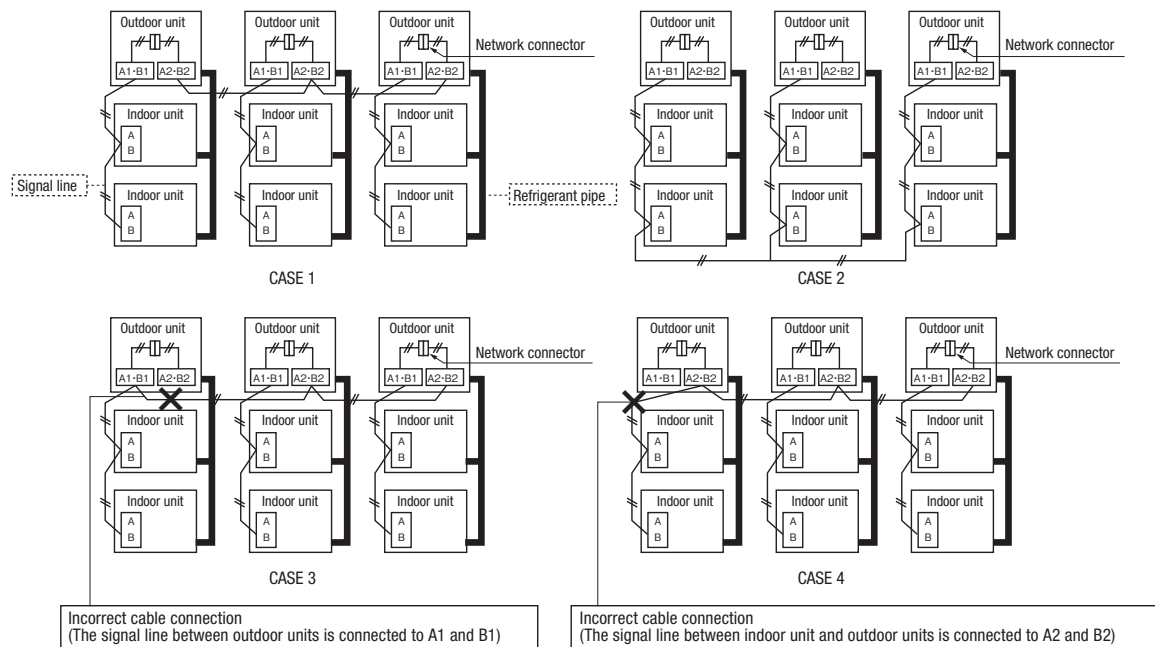

#### ●Address No. setting

Set SW1 through 4 and SW5-2 provided on the PCB and SW1 & 2 provided on the outdoor unit PCB as shown in the drawings below.

Indoor PCB	SW1, 2 (blue)	For setting indoor No. (The ten's and one's)
	SW3, 4 (green)	For setting outdoor No. (The ten's and one's)
	SW5-2	Indoor No. switch (The hundred's Place) [OFF : 0, ON : 1]
Outdoor PCB	SW1, 2 (green)	For setting outdoor No. (The ten's and one's)

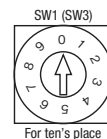

By inserting a flat driver (precision screwdriver) into this groove and turn the arrow to point a desired number.

#### ●Summary of address setting methods (figures in [ ] should be used with previous SL)

	Units supporting new SL			Units NOT supporting new SL		
	Indoor unit address setting		Outdoor unit address setting	Indoor unit address setting		Outdoor unit address setting
	Indoor No. switch	Outdoor No. switch	Outdoor No. switch	Indoor No. switch	Outdoor No. switch	Outdoor No. switch
Manual address setting (previous SL/new SL)	000-127[47]	00-31[47]	00-31[47]	00-47	00-47	00-47
Automatic address setting for single refrigerant system installation (previous SL/new SL)	000	49	49	49	49	49
Automatic address setting for multiple refrigerant systems installation (with new SL only)	000	49	00-31	×	×	×

Do not set numbers other than those shown in the table, or an error may be generated.

Note: When units supporting new SL are added to a network using previous SL such as one involving FDO/A/△/△/KXE4 series units, choose previous SL for the communication protocol and set addresses manually. Since the models FDT224 and 280 have 2 PCBs per unit, set different indoor unit No. and SW on each PCB.

- An outdoor unit No., which is used to identify which outdoor unit and indoor units are connected in a refrigerant system, is set on outdoor unit PCB and indoor unit PCB. Give the same outdoor unit No. to all outdoor unit and indoor units connected in same refrigerant system.
- An indoor unit No. is used to identify individual indoor units. Assign a unique number that is not assigned to any other indoor units on the network.

Unless stated otherwise, the following procedures apply, when new SL is chosen for the communication protocol.  
When previous SL is chosen, use figures shown in [ ] in carrying out these procedures.

**Manual address setting** Generally applicable to new SL/previous SL, use figures in [ ] with previous SL.

- ① Outdoor unit address setting  
Set as follows before you turn on power. Upon turning on power, the outdoor unit address is registered.  
Set the **Outdoor Unit No. switch to a number 00 - 31 [in the case of previous SL: 00 - 47]**.  
Set a unique number by avoiding the numbers assigned to other outdoor units on the network.
- ② Indoor unit address setting  
Set as follows before you turn on power. Upon turning on power, the indoor unit address is registered.  
Set the **Indoor Unit No. switch to a number 000 - 127 [in the case of previous SL: 00 - 47]**.  
Set the **Outdoor Unit No. switch** to the outdoor unit No. of the associated outdoor unit within the range of **00 - 31 [in the case of previous SL: 00 - 47]**.  
Set a unique number by avoiding the numbers assigned to other indoor units on the network.
- ③ Turn on power in order from the outdoor unit to indoor units. Give a one-minute or longer interval for them.  
\* When there are some units not supporting new SL connected in the network, set SW5-5 to ON to choose the previous SL communication mode.  
In the case of previous SL, the maximum number of indoor units connectable in a network is 48.

**Automatic address setting** Generally applicable to new SL/previous SL, use figures in [ ] with previous SL.

With new SL, you can set indoor unit addresses automatically even for an installation involving multiple refrigerant systems connected with same network, in addition to the conventional automatic address setting of a single refrigerant system installation.

However, an installation must satisfy some additional requirements such as for wiring methods, so please read this manual carefully before you carry out automatic address setting.

**(1) In the case of a single refrigerant system installation** (Generally applicable to new SL/previous SL, use figures in [ ] with previous SL.)

- ① Outdoor unit address setting  
Set as follows before you turn on power.  
Make sure that the **Outdoor Unit No. switch** is set to **49 (factory setting)**
- ② Indoor unit address setting  
Set as follows before you turn on power.  
Make sure that the **Indoor Unit No. switch** is set to **000 [in the case of previous SL: 49] (factory setting)**  
Make sure that the **Outdoor Unit No. switch** is set to **49 (factory setting)**
- ③ Turn on power in order from the outdoor unit to indoor units. Give a one-minute or longer interval for them. Unlike the procedure set out in (2) below, you need not change settings from the 7-segment display panel.
- ④ Make sure that the number of indoor units indicated on the 7-segment display panel agrees with the number of the indoor units that are actually connected to the refrigerant system.

**(2) In the case of a multiple refrigerant systems installation** (Applicable to new SL only. In the case of previous SL, set addresses with some other method.)

(This option is available when the interconnection wiring among refrigerant systems is on the outdoor side and new SL is chosen as the communication protocol.)

**Address setting procedure** (perform these steps for each outdoor unit)

[STEP1] (Items set before turning on power)

- ① Outdoor unit address setting  
Set as follows before you turn on power.  
Set the **Outdoor Unit No. switch** to a number **00 - 31**. Set a unique number by avoiding the numbers assigned to other outdoor units on the network.
- ② Indoor unit address setting  
Set as follows before you turn on power.  
Make sure that the **Indoor Unit No. switch** is set to **000 (factory setting)**  
Make sure that the **Outdoor Unit No. switch** is set to **49 (factory setting)**
- ③ Isolate the present refrigerant system from the network.  
Disengage the **network connectors (white 2P)** of the outdoor units. (Turning on power without isolating each refrigerant system will result in erroneous address setting.)

[STEP2] (Power on and automatic address setting)

- ④ Turn on power to the outdoor unit  
Turn on power in order from the outdoor unit to indoor units. Give a one-minute or longer interval for them.
- ⑤ Select and enter "1" in P31 on the 7-segment display panel of each outdoor unit to input "Automatic address start."
- ⑥ Input a starting address and the number of connected indoor units.  
Input a starting address in P32 on the 7-segment display panel of each outdoor unit.
- ⑦ When a starting address is entered, the display indication will switch back to the "Number of Connected Indoor Units Input" screen.  
Input the number of connected indoor units from the 7-segment display panel of each outdoor unit. Please input the number of connected indoor units for each outdoor unit. (You can input it from P33 on the 7-segment display panel.) When the number of connected indoor units is entered, the 7-segment display panel indication will switch to "AUX" and start flickering.


[STEP3] (Automatic address setting completion check)

- ⑧ Indoor unit address determination  
When the indoor unit addresses are all set, the 7-segment display panel indication will switch to "AUE" and start flickering.  
If an error is detected in this process, the display will show "A○○."  
Check the 7-segment display panel of each outdoor unit.  
Depending on the number of connected indoor units, it may take **about 10 minutes** before the indoor unit addresses are all set.

[STEP4] (Network definition setting)

- ⑨ Network connection  
When you have confirmed an "AUE" indication on the display of each outdoor unit, **engage the network connectors** again.
- ⑩ Network polarity setting  
**After you have made sure that the network connectors are engaged** in ⑧, select and enter "1" in P34 on the 7-segment display panel of **any outdoor unit (on only 1 unit)** to specify network polarity.
- ⑪ Network setting completion check  
When the network is defined, "End" will appear on the 7-segment display panel. An "End" indication will go off, when some operation is made from the 7-segment display panel or 3 minutes after.

	STEP1	STEP2	STEP3	STEP4
Indoor unit power source	② OFF	④ ON	—	—
Outdoor unit power source	① OFF	④ ON	—	—
Indoor unit (indoor/outdoor No.SW)	② indoor000/outdoor 49 (factory setting)	—	—	—
Outdoor unit (outdoor No.SW)	① 01,02(Ex)	—	—	—
Network connectors	③ Disconnect(each outdoor unit)	—	—	⑨ Connect(each outdoor unit)
Start automatic address setting	—	⑤ Select "Automatic Address Start" on each outdoor unit.	—	—
Set starting address	—	⑥ outdoor 01:[01](Ex) outdoor 02:[04](Ex)	—	—
Set the number of indoor unit	—	⑦ outdoor 01:[03](Ex) outdoor 02:[03](Ex)	—	—
Polarity setting	—	—	—	⑩ Set in P34 on the 7-segment display panel of any outdoor unit.
7-segment display	—	⑦ [AUX] (Blink)	⑧ "AUE"(blink), or "A○○" in error events.	⑪ [End]

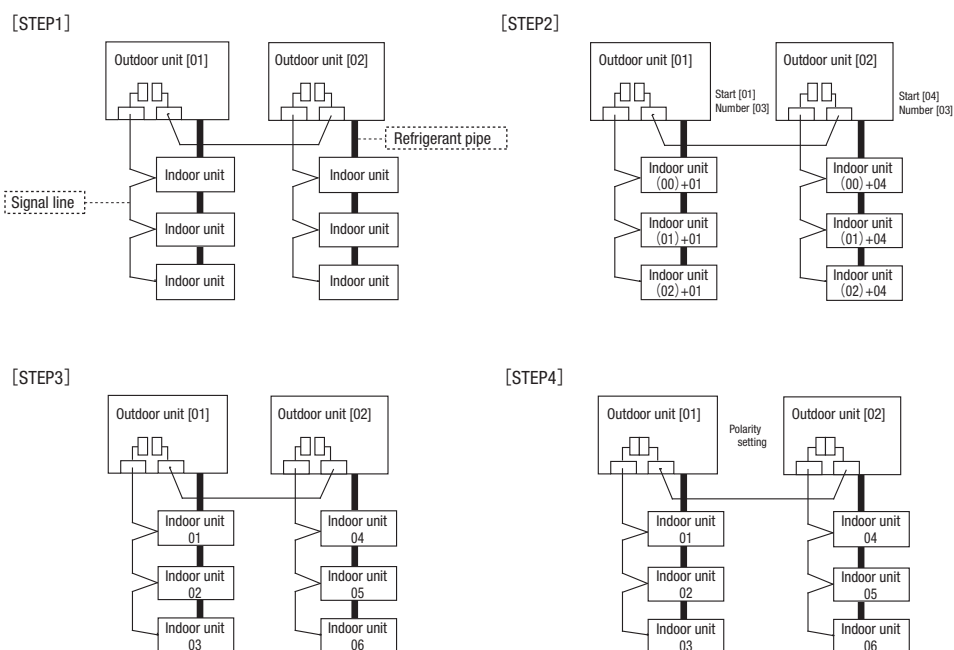

- Within a refrigerant system, indoor units are assigned addresses in the order they are recognized by the outdoor unit. Therefore, they are not necessarily assigned addresses in order from the nearest to the outdoor unit first as depicted in drawings above.
- Make sure that power has been turned on to all indoor units.
- When addresses are set, you can have the registered indoor unit address No.'s and the outdoor unit address No. displayed on the remote control unit by pressing its Inspection switch.
- Automatic address setting can be used for an installation in which plural indoor units are controlled from one remote control unit.
- Once they are registered, addresses are stored in microcomputers, even if power is turned off.
- If you want to change an address after automatic address setting, you can change it from the remote control unit with its "Address Change" function or by means of manual setting. Set a unique address by avoiding the address assigned to other indoor unit on the network when the address is changed.
- Do not turn on power to central control equipment until automatic address setting is completed.
- When addresses are set, be sure to perform a test run and ensure that you can operate all indoor and outdoor units normally. Also check the addresses assigned to the indoor units.

**Address change (available only with new SL)**

"Address Change" is used, **when you want to change an indoor unit address assigned with the "Automatic Address Setting" function from a remote control unit.** Accordingly, the conditions that permit an address change from a remote control unit are as follows.

	Indoor unit address setting		Outdoor unit address setting
	Indoor No.SW	Outdoor No.SW	Outdoor No.SW
Automatic address setting for single refrigerant system installation	000	49	49
Automatic address setting for multiple refrigerant systems installation	000	49	00-31

If "CHANGE ADD. ▼" is selected with some addresses falling outside these conditions, the following indication will appear for 3 seconds on the remote control "INVALID OPER".

**Operating procedure**

(1) When single indoor unit is connected to the remote control.

Item	Operation	Display
1 Address change mode	① Press the AIR CON No. switch for 3 seconds or longer.	[CHANGE ADD.▼]
	② Each time when you press the $\blacklozenge$ switch, the display indication will be switched.	[CHANGE ADD.▼] ⇔[MASTER I/U▲]
	③ Press the Set switch when the display shows "CHANGE ADD. ▼" and then start the address change mode, changing the display indication to the "Indoor Unit No. Setting" screen from the currently assigned address.	[I/U 001 O/U 01] (1sec) →[ $\blacklozenge$ SET I/U ADD.] (1sec) →[I/U 001 $\blacklozenge$ ] (Blink)
2 To set a new indoor unit No.	④ Set a new indoor unit No. with the $\blacklozenge$ switch. A number indicated on the display will increase or decrease by 1 upon pressing the ▲ or ▼ switch respectively.	[I/U 000▲] ⇔[I/U 001 $\blacklozenge$ ] ⇔[I/U 002 $\blacklozenge$ ] ⇔ . . . ⇔[I/U 127▼]
	⑤ After selecting an address, press the Set switch, and then the indoor unit address No. is defined.	[I/U 002] (2sec)
3 To set a new outdoor unit No.	⑥ After showing the defined indoor address No. for 2 seconds, the display will change to the "Outdoor Address No. Setting" screen. The currently assigned address is shown as a default value.	[I/U 002] (2sec Lighting) →[ $\blacklozenge$ SET O/U ADD.] (1sec) →[O/U 01 $\blacklozenge$ ] (Blink)
	⑦ Set a new outdoor unit No. with the $\blacklozenge$ switch. A number indicated on the display will increase or decrease by 1 upon pressing the ▲ or ▼ switch respectively.	[O/U 00▲] ⇔[O/U 01 $\blacklozenge$ ] ⇔[O/U 02 $\blacklozenge$ ] ⇔ . . . ⇔[O/U 31▼]
	⑧ After selecting an address, press the Set switch, and then the outdoor unit No. and the indoor unit No. are defined.	[I/U 002 O/U 02] (2sec Lighting) →[SET COMPLETE] (2sec Lighting) →Returns to normal condition.

(2) When plural indoor units are connected to the remote control.

When plural indoor units are connected, you can change their addresses without altering their cable connection.

Item	Operation	Display
1 Address change mode	① Press the AIR CON Unit No. switch for 3 seconds or longer.	[CHANGE ADD.▼]
	② Each time when you press the $\blacklozenge$ switch, the display indication will be switched.	[CHANGE ADD.▼] ⇔[MASTER I/U▲]
	③ Press the Set switch when the display shows "CHANGE ADD. ▼" The lowest indoor unit No. among the indoor units connected to the remote control unit will be shown.	[ $\blacklozenge$ SELECT I/U] (1sec) →[I/U 001 O/U 01▲] (Blink)
2 Selecting an indoor unit to be changed address	④ Pressing the $\blacklozenge$ switch will change the display indication cyclically to show the unit No.'s of the indoor units connected to the remote control and the unit No.'s of the outdoor units connected with them.	[I/U 001 O/U 01▲] ⇔[I/U 002 O/U 01 $\blacklozenge$ ] ⇔[I/U 003 O/U 01 $\blacklozenge$ ] ⇔ . . . ⇔[I/U 016 O/U 01▼]
	⑤ Then the address No. of the indoor unit to be changed is determined and the screen switches to the display " $\blacklozenge$ SET I/U ADD."	[ $\blacklozenge$ SET I/U ADD.] (1sec) →[I/U 001 $\blacklozenge$ ] (Blink)
3 Setting a new indoor unit No.	⑥ Set a new indoor unit No. with the $\blacklozenge$ switch. A number indicated on the display will increase or decrease by 1 upon pressing the ▲ or ▼ switch respectively.	[I/U 000▲] ⇔[I/U 001 $\blacklozenge$ ] ⇔[I/U 002 $\blacklozenge$ ] ⇔ . . . ⇔[I/U 127▼]
	⑦ After selecting an address, press the Set switch. Then the address No. of the indoor unit is determined.	[I/U 002] (2sec)
4 Setting a new outdoor unit No.	⑧ The display will indicate the determined indoor address No. for 2 seconds and then switch to the " $\blacklozenge$ SET O/U ADD." screen. A default value shown on the display is the current address.	[I/U 002] (2sec lighting) ⇔[ $\blacklozenge$ SET O/U ADD.] (1sec) ⇔[O/U 01 $\blacklozenge$ ] (Blink)
	⑨ Set a new outdoor unit No. with the $\blacklozenge$ switch. A number indicated on the display will increase or decrease by 1 upon pressing the ▲ or ▼ switch respectively.	[O/U 00▲] ⇔[O/U 01 $\blacklozenge$ ] ⇔[O/U 02 $\blacklozenge$ ] ⇔ . . . ⇔[O/U 31▼]
	⑩ After selecting an address, press the Set switch. Then the address of the indoor unit and outdoor unit are determined.	[I/U 002 O/U 02] (2sec lighting) →[ $\blacklozenge$ SELECT] (1sec lighting) →[I/U SELECTION▼] (lighting)
	⑪ If you want to continue to change addresses, return to step ④.	[Press the $\blacklozenge$ switch] (1sec) →[SET COMPLETE] (2-10sec lighting)
5 Ending the session	⑫ If you want to end the session (and reflect new address settings) In Step ⑩, press the ▼ switch to select "END ▲." If you have finished changing addresses, press the Set switch while "END ▲" is shown. While new settings are being transmitted, "SET COMPLETE" will be indicated. Then the remote control display will change to the normal state.	[END▲] →[SET COMPLETE] (2-10sec lighting) →Normal state
	⑬ If you want to end the session (without reflecting new address settings) Before you complete the present address setting session, press the "ON/OFF" switch. Then the display is change to exit from this mode and switch the display to the normal state. All address settings changed in the session will be aborted and not reflected.	[ON/OFF] →Forced termination

The  $\blacklozenge$  switch will continuously change the display indication to the next one in every 0.25 seconds when it is pressed for 0.75 seconds or longer.  
If the Reset switch is pressed during an operation, the display indication returns to the one that was shown before the last Set switch operation.  
Even if an indoor unit No. is changed in this mode, the registered indoor unit No. before address change mode is displayed when [I/U SELECTION▼] is shown.  
When "SET COMPLETE" is shown, indoor unit No.'s are registered.

**NOTICE** Turn on power to central control equipment after the addresses are determined.  
Turning on power in wrong order may result in a failure to recognize addresses.



● 7-segment display indication in automatic address setting

Items that are to be set by the customer

Code	Contents of a display
P30	Communication protocol 0: Previous SL mode 1: New SL mode (The communication protocol is displayed ; display only)
P31	Automatic address start
P32	Input starting address Specify a starting indoor unit address in automatic address setting.
P33	Input number of connected indoor units Specify the number of indoor units connected in the refrigerant system in automatic address setting.
P34	Polarity definition 0: Network polarity not defined. 1: Network polarity defined.

7-segment display indication in automatic address setting

Code	Contents of a display
AUX	During automatic address setting. X: The number of indoor units recognized by the outdoor unit.
AUE	Indoor unit address setting is completed normally.
End	Polarity is defined. (Automatic address) Completed normally.

Address setting failure indication

Code	Contents of a display	Please check
A00	Unable to find any indoor unit that can be actually communicated with.	Are signal lines connected properly without any loose connections? Is power for indoor units all turned on?
A01	The number of the indoor units that can be actually communicated with is less than the number specified in P33 on the 7-segment display panel.	Are signal lines connected properly without any loose connections? Input the number of connected indoor units again.
A02	The number of the indoor units that can be actually communicated with is more than the number specified in P33 on the 7-segment display panel.	Are signal lines connected properly without any loose connections? Are the network connectors coupled properly? Input the number of connected indoor units again.
A03	Starting address (P32) + Number of connected indoor units (P33) > 128	Input the starting address again. Input the number of connected indoor units again.
A04	While some units are operating in the previous SL mode on the network, the automatic address setting on multiple refrigerant systems is attempted.	Perform manual address setting. Separate old SL setting unit from the network Arrange all units to operate in the new SL.

Error indication

Code	Contents of a display	Cause
E2	Duplicating indoor unit address.	• Incorrect manual address setting
E3	Incorrect pairing of indoor-outdoor units.	• An outdoor unit number that does not exist in the network is specified • No master unit exists in combination outdoor unit.
E11	Address setting for plural remote controllers.	• Indoor unit address is set from plural remote controls.
E12	Incorrect address setting of indoor units.	• Automatic address setting and manual address setting are mixed.
E31	Duplicating outdoor unit address.	• Plural outdoor units are exist as same address in same network.
E46	Incorrect setting.	• Automatic address setting and manual address setting are mixed.

## 7-2. Selection switching

Controls of outdoor unit may be selected as follows using the dip switches on the PCB and P○○ on the 7-segment.

To change P○○ on the 7-segment, hold down SW8 (increasing a number shown on the 7-segment display panel: one's place), SW9 (increasing a number shown on the 7-segment display panel: tens place) and SW7 (Data write/Enter).

Control selecting method		P○○ on 7-segment	Content of control
SW setting on PCB		Set external input function allocation to "2" *1	Forced cooling mode (It can be fixed at cooling with external input terminals open, or at heating with them short-circuited.)
SW3-7 to ON=1 *1		—	Cooling test run
SW5-1 to ON + SW5-2 to ON		—	Heating test run
SW5-1 to ON + SW5-2 to OFF		—	Pump down operation
Close the fluid operation valve on outdoor unit and set as follows: (1) SW5-2 on PCB to ON (2) SW5-3 on PCB to ON (3) SW5-1 on PCB to ON		—	Inputting signals to external input terminals selects the demand mode. (J13 short-circuited: Level input, J13 open: Pulse input)
SW4-5:OFF, SW4-6:OFF*1	80% (Factory default)	Set allocation of external input function to "1" *1	Communication method selection ON: Previous SL communication, OFF: New SL communication
SW4-5:ON, SW4-6:OFF*1	60%		
SW4-5:OFF, SW4-6:ON*1	40%		
SW4-5:ON, SW4-6:ON*1	00%		
SW5-5		—	External input switing (CnS1, CnS2 only) Closed: Level input, Open: Pulse input
J13: Closed (Factory default), J13: Open		—	Defrost recover temperature Closed: normal, Open: cold weather district
J14: Closed (Factory default), J14: Open		—	Defrost start temperature Closed: normal, Open: cold weather district
J15: Closed (Factory default), J15: Open		—	Operation priority selection 0: First push priority (at shipping) 1: Last push priority 2: Priority of master unit's setting operation mode 3: Priority of required major operation mode
—		P01	Outdoor unit fan snow protection control 0: Control disabled (at shipping) 1: Control enabled
—		P02	Outdoor unit fan snow protection control ON time setting - 30 sec (at shipping) 10, 30-600 sec
—		P03	Energy saving mode *2 OFF: Disabled (at shipping) 2 stage demand mode 000, 040, 060, 080 [%]
—		P04	Silencing mode setting 0 (at shipping) - 3: Larger values for larger effect
—		P05	Allocation of external output (CnZ1)
—		P06	Allocation of external input (CnS1)
—		P07	Allocation of external input (CnS2)
—		P08	Allocation of external input (CnG1)
—		P09	Allocation of external input (CnG2)
—		P10	Spare
—		P11~	

\*1 Control is switched when both the allocation of external input function (P07-10) and SW are changed.

(Example: To use CnS1 for the input of forced cooling mode, set P07 at 2 and SW3-7 at ON. To use CnS2 for the input of forced cooling mode, set P08 at 2 and SW3-7 at ON.)

\*2 In the energy saving mode, the capacity restriction becomes effective even if no signals are input at external input terminals.

By changing the allocation of external input functions (P07-19) on the 7-segment, functions of external input terminals may be selected. Inputting signals to external input terminals enable the following functions.

Setting value for allocation of external input function	With external input terminals closed	With external input terminals open
"0" : External operation input	Invalid	Valid
"1" : Demand input	Invalid	Valid
"2" : Cooling/heating forced input	Valid	Invalid
"3" : Silent mode 1 *1	Valid	Invalid
"4" : Spare		
"5" : Outdoor fan snow guard control input	Valid	Invalid
"6" : Test run external input 1 (equivalent to SW5-1)	Test run start	Normal
"7" : Test run external input 2 (equivalent to SW5-2)	Cooling	Heating
"8" : Silent mode 2 *2	Valid	Invalid
"9" : 2 stage demand input	Invalid	Valid

\*1 Valid/invalid is changed depending on outdoor temperature.

\*2 It is always Valid, regardless of outdoor temperature.

The external output function of CnZ1 can be changed by changing the setting in P06 on the 7-segment display panel.

"0" : Operation output
"1" : Error output
"2" : Compressor ON output
"3" : Fan ON output
"4 - 9" : Spare

## 7-3. External input and output terminals specifications

Name	Purpose (Factory default)	Specification	Operating side connector
External input CnS1	External operation input (Closed at shipping)	Non-voltage contactor (DC12V)	J.S.T (NICHIAITSU) B02B-XAMK-1 (LF) (SN)
External input CnS2	Demand input (Closed at shipping)	Non-voltage contactor (DC12V)	J.S.T (NICHIAITSU) B02B-XARK-1 (LF) (SN)
External input CnG1	Cooling/Heating forced input (Open at shipping)	Non-voltage contactor (DC12V)	J.S.T (NICHIAITSU) B02B-XAEK-1 (LF) (SN)
External input CnG2	Silencing mode input (Open at shipping)	Non-voltage contactor (DC12V)	J.S.T (NICHIAITSU) B02B-XASK-1 (LF) (SN)
External output CnZ1	Spare output (External output)	DC12V output	MOLEX 5566-02A-RE
External output CnH	Operation output	DC12V output	MOLEX 5566-02A-BU
External output CnY	Error output	DC12V output	MOLEX 5266-02A

## 8. TEST OPERATION AND TRANSFER

### 8-1. Before starting operation

- (1) **Make sure that a measurement between the power source terminal block and ground, when measured with a 500V megger tester, is greater than 1 MΩ.**
- (2) When the resistance of the signaling line terminal block is 100Ω or less before turning the power on, the power cables may be connected to the signaling line terminal block. Check the wiring referring to the standard resistance value of 6-3.
- (3) **Be sure turn ON the power source to supply power to the crank case heater 6 hours before operation.**  
After supplying the power to the crank case heater, the compressor may not start unless the time mentioned above elapses. (For protection of compressor)  
In such occasion, the 7-segment LED shows "dL○○○○". Wait till the temperature in the compressor rises sufficiently after turning power on to the crank case heater, before starting the test run.
- (4) **Make sure that the bottom of the compressor casing is warm.**
- (5) Be sure to fully open the service valves (liquid, gas) for the outdoor unit.  
Operating the outdoor unit with the valves closed may damage the compressor.
- (6) **Confirm that the power is supplied to all indoor units. It could cause trouble if there is any indoor unit which is not powered.**

#### CAUTION

Please make sure that the service valves (gas, liquid) are full open before a test run. Conducting a test run with any of them in a closed position can result in a compressor failure.

### 8-2. Test run

#### (1) Test run from an outdoor unit.

Whether CnS1 is set to ON or OFF, you can start a test run by using the SW5-1 and SW5-2 switches provided on the outdoor unit PCB.

Select the test run mode first.

Please set SW5-2 to ON for a cooling test run or OFF for a heating test run. (It is set to OFF at the factory for shipment.)

Turning SW5-1 from OFF to ON next will cause all connected indoor units to start.

When a test run is completed, please set SW5-1 to OFF.

Note: During a test run, an indoor unit cannot be operated from the remote control unit (to change settings). ("Under central control" is indicated.)

#### (2) Method of starting a test run for a cooling operation from an outdoor unit: please operate a remote control unit according to the following steps.

##### (a) Start of a cooling test run

Operate the unit by pressing the [START/STOP] button.

Select the "COOLING" mode with the [MODE] button.

Press the [TEST RUN] button for 3 seconds or longer.

The screen display will be switched from "Select with ITEM ◆" → "Determine with [SET]" → "Cooling test run ▼."

When the [SET] button is pressed while "Cooling test run ▼" is displayed, a cooling test run will start. The screen display will be switched to "COOLING TEST RUN."

##### (b) Termination of a cooling test run

When the [START/STOP] button or the "TEMP SET [✓] [△]" button is pressed, a cooling test run will be terminated.

### 8-3. Transfer

- After completing the installation and test run, explain methods of use and maintenance to the customer, referring to the Instruction Manual. Ask the customer to keep the installation manual safely together with the Instruction Manual.
- Instruct the customer that the power should not be turned off even if the unit is not to be used for a long time. This will enable operation of the air-conditioner any time. (Since the compressor bottom is warmed by the crank case heater, seasonal compressor trouble can be prevented.)

## 9. CAUTIONS FOR SERVICING (for R410A and compatible machines)

- (1) To avoid mixing of different types of oil, use separate tools for each type of refrigerant.
- (2) To avoid moisture from being absorbed by the ice machine oil, the time for when the refrigerant circuit is open should be kept as short as possible. (Within 10 min. is ideal.)
- (3) For other piping work, airtightness testing, vacuuming, and refrigerant charging, refer to section 4, REFRIGERANT PIPING.
- (4) Diagnostic Inspection Procedures  
For the meanings of failure diagnosis messages, please refer to the technical manual.
- (5) 7-segment LED indication  
Data are indicated when so chosen with the indication selector switch. For the details of indication, please refer to the technical manual.
- (6) Internal wiring  
After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured.